

SAFETY NOTICES

People's lives depend on your selection of suitable equipment and installation sites and your safe installation, service, and operation of our products. Federal Signal recommends the following publications from the Federal Emergency Management Agency for assistance with planning an outdoor warning system: 1. The "Outdoor Warning Guide (CPG 1-17), 2. "Civil Preparedness, Principles of Warning" (CPG 1-14), 3. FEMA-REP-1, Appendix 3 (Nuclear Plant Guideline), and 4. FEMA-REP-10 (Nuclear Plant Guideline). Contact Federal Warning System's Customer Care Center at: <http://www.federalwarningsystems.com> or 1-800-524-3021 for further information about these publications.

It is important to read, understand and follow all instructions shipped with this product. In addition, listed below are some other important safety instructions and precautions you should follow.

PLANNING

- If suitable warning equipment is not selected, the installation site for the siren is not selected properly or the siren is not installed properly, it may not produce the intended optimum audible warning. Follow Federal Emergency Management Agency (FEMA) recommendations.
- If sirens are not activated in a timely manner when an emergency condition exists, they cannot provide the intended audible warning. It is imperative that knowledgeable people, who are provided with the necessary information, are available at all times to authorize the activation of the sirens.
- When sirens are used out of doors, people indoors may not be able to hear the warning signals. Separate warning devices or procedures may be needed to effectively warn people indoors.
- The sound output of sirens is capable of causing permanent hearing damage. To prevent excessive exposure, carefully plan siren placement, post warnings, and restrict access to areas near sirens.
- Activating the sirens may not result in people taking the desired actions if those to be warned are not properly trained about the meaning of siren sounds. Siren users should follow FEMA recommendations and instruct those to be warned of correct actions to be taken.
- A siren that does not work will not provide any warning. After installation, service, or maintenance, test the siren system to confirm that it is operating properly. Test the system regularly to confirm that it will be operational in an emergency.
- If future service and operating personnel do not have these instructions to refer to, the siren system may not provide the intended audible warning and service personnel may be exposed to permanent hearing loss, bodily injury, or death. File these instructions in a safe place and refer to them periodically. Give a copy of these instructions to new recruits and trainees. Also give a copy to anyone who is going to service or repair the siren.

SAFETY NOTICES

People's lives depend on your safe installation, service and operation of our products. It is important to read, understand and follow all instructions shipped with this product. In addition, listed below are some other important safety instructions and precautions you should follow:

INSTALLATION & SERVICE

- Electrocution or severe personal injury can occur when performing various installation and service functions such as making electrical connections, drilling holes, or lifting equipment. Therefore experienced electricians in accordance with national, state and any other electrical codes having jurisdiction should perform installation. All work should be performed under the direction of the installation or service crew safety foreman.
- The sound output of sirens is capable of causing permanent hearing damage. To prevent excessive exposure, carefully plan siren placement, post warnings and restrict access to areas near the sirens. Sirens may be operated from remote control points. Whenever possible, disconnect all siren power including batteries before working near the siren.
- After installation or service, test the siren system to confirm that it is operating properly. Test the system regularly to confirm that it will be operational in an emergency.
- If future service personnel do not have these warnings and all other instructions shipped with the equipment to refer to, the siren system may not provide the intended audible warning and service personnel may be exposed to death, permanent hearing loss, or other bodily injury. File these instructions in a safe place and refer to them periodically. Give a copy of these instructions to new recruits and trainees. Also, give a copy to anyone who is going to service or repair the sirens. For additional copies, call the Federal Warning Systems Customer Care Center at 800-524-3021 or write to them at 2645 Federal Signal Drive, University Park, IL 60466.

OPERATION


Failure to understand the capabilities and limitations of your siren system could result in permanent hearing loss, other serious injuries or death to persons too close to the sirens when you activate them or to those you need to warn. Carefully read and thoroughly understand all safety notices in this manual and all operations-related-items in all instruction manuals shipped with equipment. Thoroughly discuss all contingency plans with those responsible for warning people in your community, company, or jurisdiction.

WARNING

Read and understand the information contained in this manual, before attempting to install or service this siren.

Pay careful attention to the following notices located on the equipment.

NOTICES – INTERNALLY PLACED

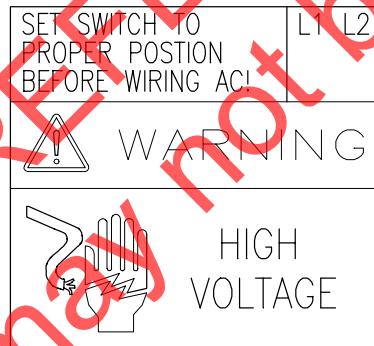

HISTORICAL
Document may not be up to date

Limited Warranty

*The Signal Division, **Federal Signal Corporation**, warrants each new product to be free from defects in material and workmanship, under normal use and service, for a period of two years on parts replacement and bench labor (one year for Informer, EAS, and Federal software products) from the date of delivery to the first user-purchaser. Federal Warning Systems warrants every 2001 Siren (Top of pole only) to be free from defects in material, per our standard warranty, under normal use and service for a period of five years on parts replacement.*

During this warranty period, the obligation of Federal is limited to repairing or replacing, as Federal may elect, any part or parts of such product which after examination by Federal discloses to be defective in material and/or workmanship.

Federal will provide warranty for any unit which is delivered, transported prepaid, to the Federal factory or designated authorized warranty service center for examination and such examination reveals a defect in material and/or workmanship.

This warranty does not cover travel expenses, the cost of specialized equipment for gaining access to the product, or labor charges for removal and re-installation of the product. The Federal Signal Corporation warranty shall not apply to components or accessories that have a separate warranty by the original manufacturer, such as, but not limited to, batteries.

This warranty does not extend to any unit which has been subjected to abuse, misuse, improper installation or which has been inadequately maintained, nor to units which have problems related to service or modification at any facility other than Federal factory or authorized warranty service centers. Moreover, Federal shall have no liability with respect to defects arising in Products through any cause other than ordinary use (such as, for example, accident, fire, lightning, water damage, or other remaining acts of god).

THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL FEDERAL BE LIABLE FOR ANY LOSS OF PROFITS OR ANY INDIRECT OR CONSEQUENTIAL DAMAGES ARISING OUT OF ANY SUCH DEFECT IN MATERIAL WORKMANSHIP.



FEDERAL SIGNAL

Federal Warning Systems

2645 Federal Signal Drive, University Park, IL 60466

Phone: (800) 524-3021 Fax: (708) 534-4865

Website: <http://www.federalwarningsystems.com>

TABLE OF CONTENTS

Paragraph		Page
	SECTION I - CHARACTERISTICS	
1-1.	GENERAL	1-1
	SECTION II - SPECIFICATIONS	
2-1.	CONTROLLER SPECIFICATIONS	2-1
2-2.	SIGNALING FORMAT SPECIFICATIONS	2-1
2-3.	OPTIONAL RF RECEIVER SPECIFICATIONS	2-2
	SECTION III - INSTALLATION	
3-1.	SIREN CONTROLLER INSTALLATION	3-1
3-2.	FACTORS AFFECTING RADIO RECEPTION AND ANTENNA CONNECTION	3-7
3-3.	PRE-OPERATION CHECKOUT	3-7
	SECTION IV – RF RECEIVER DESCRIPTION, ALIGNMENT AND TESTING	
4-1.	RECEIVER MODULE GENERAL DESCRIPTION	4-1
4-2.	FEATURES	4-1
4-3.	TERMINAL STRIPS & JACKS, CONTROLS	4-1
4-4.	THEORY OF OPERATION	4-2
4-5.	TEST AND ALIGNMENT	4-3
4-6.	TCS/DCS PROGRAMMING	4-4
	SECTION V - MAINTENANCE AND SPARE PARTS	
5-1.	PREVENTIVE MAINTENANCE	5-1
5-2.	INSPECTION	5-1
5-3.	POWER SUPPLY TESTING	5-1
5-4.	SERVICE	5-1
5-5.	SPARE PARTS LIST	5-1
	LIST OF ILLUSTRATIONS	
Figure		Page
3-1.	<i>Typical Installation</i>	3-1
3-2.	<i>Contactor Wiring</i>	3-2
4-1.	<i>PL Programming Chart</i>	4-5
5-1.	<i>FC Assembly Drawing</i>	5-2

SECTION I

CHARACTERISTICS

1-1. GENERAL.

The **FC** series siren control units provide RF and/or wire line control of individually programmable timing cycles for contact closure outputs. The versatility of the **FC** makes it an ideal choice for virtually all siren control applications or any other process that can be controlled via relay contacts.

A. Features

The microprocessor based controller contains the following features:

- *Synthesized Radio Receiver (Low Band, High Band, or UHF - 3 separate models)*
- *Two-Tone and DTMF Decoders*
- *Up to 4 Individually Programmable Output Relays*
- *Siren Tone Generator*
- *Push Buttons for Local Control*
- *Contact Closure Inputs for Land Line Control*
- *RS232 Programming Port*
- *Diagnostic LEDs*
- *Single PCB Reliability*

B. Programmability

All functions of the **FC** controller are programmable from a XP compatible computer with an RS232 port using Federal Signal's easy to use **FSPWARE** programming software. The software allows easy configuration, uploading and downloading of control programs.

Programming options include:

- *Radio Receiver Frequency*
- *Single and Two-Tone Sequential Decode Tones & Tone Lengths*
- *DTMF Decode Digits*
- *Output Relay Timing Patterns*
- *Tone Generation Frequencies & Durations*

Up to six (6) control timing sequences may be programmed into the controller. Standard siren control timings can be chosen or custom relay output timings can be designed. The control functions can be activated from any combination of six (6) Single Tone, Two Tone Sequential and/or DTMF tones. Timing sequences can also be initiated using the local push buttons and contact closure inputs.

Configuration programs are stored in nonvolatile E² memory to ensure retention even during a complete power failure.

SECTION II SPECIFICATIONS

2-1. CONTROLLER SPECIFICATIONS

Electrical

AC Power Inputs 120 or 208 - 240 VAC +/- 10%, 50-60 Hz
12VDC Battery Input 11 - 15 VDC @ JP5-2
48VDC Battery Input 14 - 60 VDC @ JP5-4
Input Current @120 VAC 180 mA AC (maximum)
Input Current @12 VDC 460 mA DC (maximum)
Relay Outputs SPST (2 relays standard, 4 relays maximum)
5 A @ 30 VDC
5 A @ 240 VAC
Relay Output Timings 0.5 seconds to 999 seconds

2-2. SIGNALING FORMAT SPECIFICATIONS

6 user programmable functions are available in addition to the 5 preset functions: ARM, DISARM, REPORT, GROWL TEST, and MASTER RESET. Wildcard options can be used for each of the DTMF strings.

Two-Tone Sequential

Frequency range	282 Hz - 3000 Hz
Tone timing	0.5 sec - 0.25 sec minimum to 8 sec max.
Intertone Gap	400 ms (maximum)
Tone Accuracy	+/- 1.5%
Tone Spacing	5.0%

Single Tone

Frequency range	282 Hz - 3000 Hz
Tone timing	0.5 sec. - 8 sec maximum
Tone Accuracy	+/- 1.5%
Minimum Tone Spacing	5.0%

DTMF

String length	(All timings in milliseconds)
Mark/Space timing:	3 - 12 standard DTMF characters
Decoder Minimum	40ms/40ms (below 40/40 consult factory)
Decoder Maximum	800ms total mark/space timing per function
Encoder	100ms/100ms mark/space timing
Space between Stacked codes, minimum	1.5 seconds

FSK

Baud rate	1200 bps
Modem type	MSK (minimal shift key)
Mark frequency	1200 Hz
Space frequency	1800 Hz
Error checking	16 bit CRC

Relay Outputs

4 relay outputs	SPST (2 relays standard, 4 relays max.)
Contact Rating	5 A @ 28 VDC
	5 A @ 240 VAC

Audio Output (Optional)

Output Voltage >2 V peak to peak
Maximum Load 8 Ohms
Total Harmonic Distortion < 10% @ 1 kHz Sinewave

Serial Communications

Serial Port Configuration RS232C 1200,N,8,1, DCE

Environmental

Operating Temperature -30 to +60° C

Dimensions (H x W x D)

Height	13.50 "
Width	9.84 "
Depth	6.00 "

2-3. OPTIONAL RF RECEIVER SPECIFICATIONS

Antenna Impedance 50 ohms, +/- 10 ohms

Frequency range 30 - 50 MHz, 150 - 172 MHz,
450 - 470 MHz

Frequency Spread +/- 4.9 MHz for 30 - 50 MHz,
+/- 1.5 MHz for 150 - 174 MHz,
+/- 8.0 MHz for 450 - 470 MHz

Freq stability over temp range =/ < 2.5 ppm from -30°C to +60°C

Spurious Response & Image Rejection LB =/ > -70 dBm
HB =/ > -70 dBm
UHF =/ > -70 dBm
(measured per EIA-603, part 4.1.8)

Intermodulation Distortion Rejection LB =/ > -70 dBm
HB =/ > -70 dBm
UHF =/ > -70 dBm
(measured per EIA-603, part 4.1.9)

Adjacent Channel Selectivity LB =/ > -70 dBm
HB =/ > -70 dBm
UHF =/ > -70 dBm
(measured per EIA-603, part 4.1.6)

Sensitivity - 12dB SINAD =/ < 0.35 uV for 12 dB SINAD per EIA-603, Part 4.1.4

Sensitivity - 20dB Quieting =/ < 0.5 uV, 20 dB quieting

Squelch Sensitivity w/ 1kHz tone @ 3kHz deviation Minimum squelch setting = Open Squelch
Maximum squelch setting = < 29 dB SINAD

Shall be set at the reference decode sensitivity
(20dB SINAD) Shall open and close in less than 250 ms per
EIA-603, Part 4.1.13.2.4

Audio Output with 1KHz tone at 3KHz deviation	0.8 V _{p-p} +/- 0.20 V _{p-p}
Audio frequency response	300 Hz – 3000 Hz, +/- 1 dB, w/ 6 dB per octave de-emphasis
Hum and Noise	-35 dB relative to full quieting signal w/1 kHz tone @ 3 kHz deviation
Audio distortion with 1Kc tone at 3Kc deviation	< 10%
Operating current	< 80 mA
Operating Voltage	8 Volts DC +/- 0.25 Volts
Operating temp range	-30° + 60°C
Humidity range	0 - 98%, non-condensing
Size	3.5" x 3.5"
Weight	< 5 ounces



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

Changes or modifications not expressly approved by Federal Signal could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SECTION III INSTALLATION

DANGER

Electrocution or severe personal injury can occur when making electrical connections, drilling holes, or lifting equipment. Therefore, installation should be performed by experienced electricians in accordance with national and local electrical codes acting under the direction of the installation crew safety foreman.

3-1. SIREN CONTROLLER INSTALLATION

The information in this section provides guidelines to aid the user. The FC series controllers are factory installed in 2001DC siren control cabinets. Therefore, parts A – C of this section are not applicable to 2001DC controllers.

WARNING

The output level of a siren is capable of causing permanent hearing damage to installation personnel or others in standard use. To prevent excessive exposure, carefully plan placement of the siren and post warnings.

If the siren is being installed as part of a Civil Defense Warning system, **ALWAYS** follow Federal Emergency Management Agency (FEMA) recommendations.

ALWAYS wear hearing protection when performing tests or maintenance on the siren.

Federal recommends that all control devices be padlocked to discourage tampering and vandalism.

A. Preliminary

Carefully inspect the unit for signs of damage that may have occurred in transit. Should there be any evidence of physical damage to the unit or components, notify the carrier immediately stating the extent of damage.

B. Controller Mounting

Ordinarily the FC Series Siren Controller will be mounted on a pole. A typical installation showing the relative location of the Controller is illustrated in figure 3-1. There are numerous methods that can be used to mount the controller. In all cases the installation must be rigid, secure, and free from physical shock or vibration.

If the controller is to be used in extremely hot climates, the controller should always be located out of the direct path of the sun.

If the antenna is to be mounted directly to the control cabinet, make sure the cabinet is mounted on the side of the pole facing the base station antenna. The FC unit has three 5/16" mounting holes located on both the top and bottom mounting flanges. 1/2" conduit fitting knockouts are provided in the bottom of the FC cabinet for AC power and siren control conduit connections. A ground stud is provided in the bottom of the FC cabinet, which must be connected to earth ground.

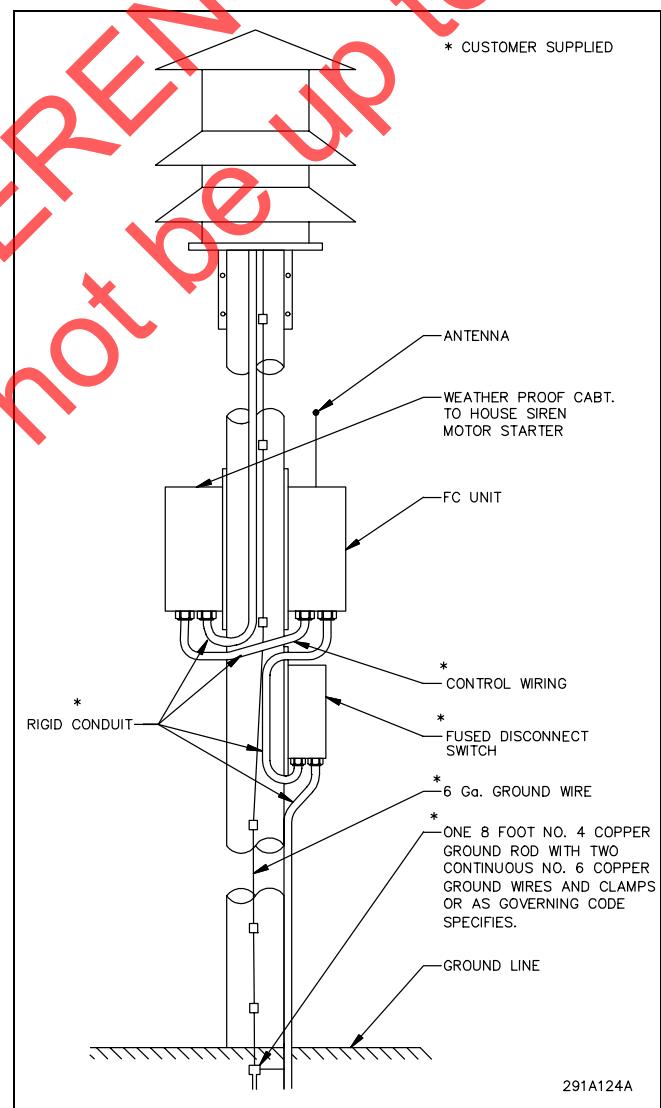


Figure 3-1. Typical Installation

C. Electrical Connections


WARNING

Install the siren electrical system in compliance with local electrical codes and NEC recommendations. Federal Signal also recommends that all user-installed conduit connections enter from bottom of cabinet.

CAUTION

SIREN UNITS AND CONTROL UNITS MUST BE SOLIDLY CONNECTED TO AN EARTH GROUND. If the siren is installed on a building, ground the system to a metallic object known to be grounded. For pole mounted installations, drive a metal rod or bar at least eight feet into the ground, as close as practical to the base of the pole. FOR MAXIMUM PROTECTION, USE A SEPARATE, CONTINUOUS 6AWG OR LARGER WIRE FROM THE SIREN FRAME TO GROUND AND FROM THE CABINET OF EACH SIREN UNIT TO GROUND.

1. Install two $\frac{1}{2}$ " user supplied conduit fittings bottom of the FC cabinet.
2. Route $\frac{1}{2}$ " conduit (steel preferred) between a user supplied fused disconnect switch, and the conduit fittings in the bottom of the FC cabinet. Fuse the disconnect switch with a 1 Amp fast acting fuse.

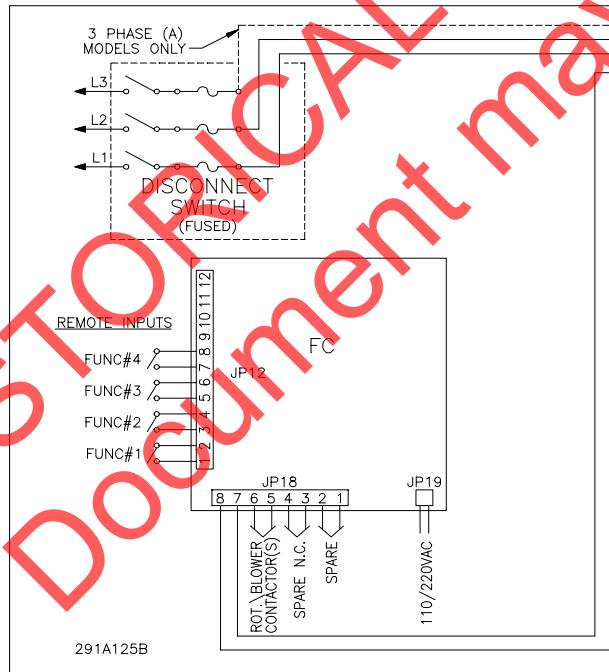

3. Follow the instructions included with the lightning protector (supplied with controller) and install in the AC service disconnect.

4. Set the AC input voltage selector switch located near the bottom right of the controller for either 110 or 220 VAC input voltage. Push the switch up for 110 VAC or down for 220 VAC. Route two 12AWG wires between the fused disconnect and the AC input at JP19 (see Figure 3-2).

5. Route a 6AWG ground wire from the earth grounding rod to the FC cabinet ground stud.

6. Route $\frac{1}{2}$ " conduit between the conduit fittings on the bottom of the FC control cabinet and the siren motor starter cabinet.

7. Route two 12AWG wires between JP18 on the FC circuit board and the siren motor contactor as follows. Connect one wire between JP18-8 of the FC control and 3 of the contactor. Connect one wire between JP18-7 and L1 of the contactor (see figure 3-2). Make other connections to the relay outputs at JP18 as necessary.

8. If the siren is to be controlled remotely via a momentary contact closure, apply the contact closure to the appropriate input on JP12 (see Figure 5-1 for pin-outs of connectors). The wire run from the contact to JP12 must not exceed 50'. A model TRC1020 can be purchased for each function if longer wire runs are required. The inputs on JP12 require 1-second contact closures.

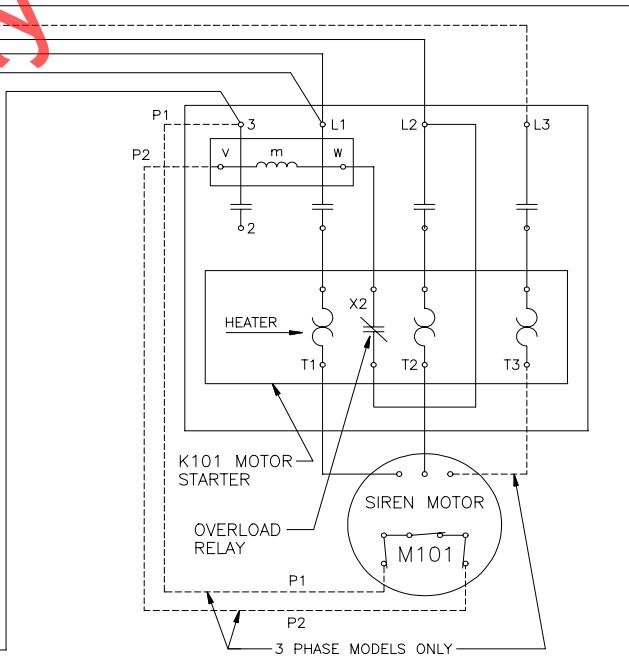


Figure 3-2. Contactor Wiring

D. Optional DC Power Connections

The FC can also operate from a 12 VDC battery or a filtered power supply between 11 to 15 VDC or 14 to 60 VDC. The DC power connections are made at JP5.

JP5 Inputs (Pin 1 faces top of PCB)
JP5 PIN 1 = GROUND
JP5 PIN 2 = 11-15 VDC
JP5 PIN 3 = GROUND
JP5 PIN 4 = 14 - 60VDC

E. Optional Audio Output Connections

The FC provides an adjustable audio output at JP6. R32 adjusts the audio output level at JP6-1 between 0 and 2 V_{p-p}.

JP6 PIN 1 = AUDIO OUT
JP6 PIN 2 = GROUND

F. Complete I/O Listing

LED Indicators

Reference	Description	Indication
D23	CPU LED	Microprocessor Heartbeat
D1	RECEIVE LED	RF Carrier Indicator on w/ carrier
D4	TRANSMIT LED	Transmit
D35	RELAY #1 LED	Relay #1 closed
D37	RELAY #2 LED	Relay #2 closed
D39	RELAY #3 LED	Relay #3 closed
D41	RELAY #4 LED	Relay #4 closed, or PA mode
D12	PRESSURE LED	Pressure Sensor input
D13	INTRUSION LED	Intrusion Sensor input
D14	CURRENT LED	Current Sensor input
D15	ROTATION LED	Rotation Sensor input
D16	LOW BATTERY LED	Low Battery Sensor (internal)
D20	AC POWER FAIL LED	AC Power Fail Sensor (internal)
D32	POWER LED	12 V Operating Power

JP3 I2C Port
1 – Receive audio input, DC isolated, 33k ohms impedance.
2 – I2C Data line, buffered.
3 – I2C Clock line, buffered.
4 – +12 Volts DC, 1 Amp max. current.
5 – Ground
6 – Transmit audio not DC isolated from interface connector P1, not gated.

JP5 Sensor Inputs (#1 @ right edge)
1 – Ground
2 – 12 Volt Battery input to 12 Volt sensor and to power supply, 11 - 15 VDC.
3 – Ground.
4 – 48 Volt Battery input to 48 Volt sensor and to power supply, 14 - 60 VDC.
5 – Ground.
6 – Rotation (Prox Switch) sensor input, dry Contact closure < 1 k ohms.
7 – Ground.
8 – Current sensor input, dry Contact closure < 1 k ohms.
9 – Ground.
10 – Intrusion sensor input, dry Contact closure < 1 k ohms.
11 – Ground.
12 – Pressure sensor input, dry Contact closure < 1 k ohms.

JP6 Test Speaker
1 – 0 to 2 V_{p-p}, Audio Source: Receiver Audio during P.A. functions,
Siren Audio during Electronic Siren functions.
2 – Ground.

JP7 Serial and FLASH programming Port
1 – RXD Disable, grounded during programming to disable RXD from onboard Digital Modem IC.
2 – TXD, standard RS232 levels.
3 – RXD, standard RS232 levels.
4 – Ground.
5 – Processor Reset not, pulsed low (to Ground) during FLASH programming.

JP8 Short To Set Deviation
1 – Short to Ground (JP8, pin 2), causes unit to transmit for setting deviation.
2 – Ground.

JP9 Receiver Module
1 – Ground.
2 – +8 Volts DC, < 100 mA current.
3 – Synthesizer programming Clock line, 0 to 5 Volt levels.
4 – Synthesizer programming Data line, 0 to 5 Volt levels.
5 – Synthesizer programming Latch line, 0 to 5 Volt levels.
6 – Carrier Detect, goes low with carrier, 0 to 5 Volt levels.
7 – Receive Audio, De-emphasized, 700 to 900 mV_{p-p} w/1 kHz tone
@ 3 kHz dev.
8 – No connection.

JP11 LEDs on w/ Intrusion
1 – Short to pin 2, to disable LEDs when Intrusion switch is closed.

JP12 Remote Activation and Sensor Inputs (#1 @ right edge of connector)
1 – Ground.
2 – Remote Activation Input #1, Activates Functions under code 1,
dry Contact closure < 1 k ohms.
3 – Ground.
4 – Remote Activation Input #2, Activates Functions under code 2,
dry Contact closure < 1 k ohms.
5 – Ground.
6 – Remote Activation Input #3, Activates Functions under code 3,
dry Contact closure < 1 k ohms.
7 – Ground.
8 – Remote Activation Input #4, Activates Functions under code 4,
dry Contact closure < 1 k ohms.
9 – Ground.
10 – Rotation Sensor Input (Current Sensor), dry Contact closure < 1 k ohms.
11 – Ground.
12 – Remote AC Sensor Input, dry Contact closure < 1 k ohms.

JP13 CTCSS Encoder / Decoder
1 – Receive audio, not DC isolated, set to 1 V_{p-p} w/ 1 kHz tone @ 3 kHz dev.
2 – Ground.
3 – +8 Volts DC, < 100 mA current.
4 – Decode not & PTT line, low with decode, set low by processor
during transmit.
5 – Transmit audio, 0 to 2 V_{p-p} of Digital data or Tone.

JP14 Short to Test Relay Output #1
1 – Short to pin 2, to engage Relay output #1.

JP15 Short to Test Relay Output #2
1 – Short to pin 2, to engage Relay output #2.

JP16 Short to Test Relay Output #3
1 – Short to pin 2, to engage Relay output #3.

JP17 Short to Test Relay Output #4
1 – Short to pin 2, to engage Relay output #4.

JP18 Relay Outputs, 3 Amps, up to 240 VAC, (#1 @ right edge of connector)
1 – Relay 4, N.O. or N.C., depending on jumper JU2
2 – Relay 4, Common
3 – Relay 3, N.O. or N.C., depending on jumper JU1
4 – Relay 3, Common
5 – Relay 2, N.O.
6 – Relay 2, Common
7 – Relay 1, N.O.
8 – Relay 1, Common

JP19 AC Power Input
1 & 2 - 120 or 240 VAC +/- 10%, 60 Hz

JP20 Spare
1 – Directly to processor pin #54 (ADC7).
2 – Ground.

P1 Transceiver Interface
1 – Transmit audio, DC isolated, 0 to 1 V_{p-p}
2 – Receive audio, DC isolated, 350 mV_{p-p} to 3 V_{p-p}
3 – PTT not, goes low during transmit
4 – Ground
5 – +12 Volts DC, 1 Amp max. current.
6 – Carrier Detect not, set low during receive
7 – No connection
8 – Ground
9 – Ground

TP1 RX Data
Receive data from digital modem IC, 0 to 5 Volts.

TP2 Receive audio - Incoming receive audio, connected to P1 pin 2

TP3 Receive audio level set - Receive audio set to 1 V_{p-p} using R58

TP4 Receive audio to Two-Tone Decoder
Audio at last stage before two-tone comparator, 1 to 3 V_{p-p}.

TP5 Receive audio from Two-Tone Decoder to processor
Audio after two-tone comparator, square waves to processor, 0 to 5 V_{p-p}.

TP6 DTMF Decoder STD - Goes low whenever a DTMF digit is being decoded.

TP7 Two-Tone Decoder, Low Pass Filter Enable
Goes high when processor is decoding a tone < 500 Hz

TP8 5 Volt Regulated power supply

TP9 **8 Volt Regulated power supply**

TP10 **Ground**

TP11 **Two-Tone Decoder, High Pass Filter Enable**
Goes high when processor is decoding a tone > 2100 Hz

TP12 **Voltage at 48-Volt Battery Input**

R7 **Digital TX Level Adjustment POT**

R32 **Audio Level Adjustment POT**

R47 **DTMF TX Level Adjustment POT**

R58 **RX Audio Level Adjustment POT**

S1 **Site Address Switch**
Sets units site number

S2 **Local Activation #1**
Press and hold for ½ second, Activates Functions under code 1.

S3 **Local Activation #2**
Press and hold for ½ second, Activates Functions under code 2.

S4 **Local Activation #3**
Press and hold for ½ second, Activates Functions under code 3.

S5 **Local Activation #4**
Press and hold for ½ second, Activates Functions under code 4.

S6 **Processor Reset**

S7 **110 / 220 VAC Selector switch**

HISTORICAL PREFERENCE ONLY
Document may not be up to date

3-2. FACTORS AFFECTING RADIO RECEPTION AND ANTENNA CONNECTION

WARNING

If the Radio system is not installed and calibrated properly, the controller may not receive the activation signals. This may cause the siren to fail and not operate in an emergency resulting in extensive property damage or death.

The radio network (transmitter, receiver and decoder) is the vital link to proper controller operation. As such it is imperative that the factors shown below, which could affect radio reception, be considered during installation.

A. All controller installations should be individually evaluated. Federal Signal Corporation maintains an engineering staff to recommend a suitable controller site location, the proper type and location of antenna and transmission line, and to answer any questions regarding the installation.

B. Distance from the transmitter is not necessarily the only factor which determines signal quality. The effects of terrain and structures can result in weak or variable reception at a given siren site.

It is desirable to evaluate each proposed site under various weather conditions by means of a portable receiver. Distance of a few hundred feet can often make a significant difference in signal strength.

C. Connect the antenna or antenna cable to the SO239 UHF connector.

D. The antenna should be mounted on the side of the pole facing the base station location. It should be mounted as high as possible; however the tip of the antenna should, when possible, be no closer than three feet from any metal siren mounting brackets.

E. In general, a gain antenna should be used if a site must be located in a known weak signal area.

F. The following paragraphs pertain to the operation of the transmitter, tone-generating equipment, and other equipment used at the base station.

1. Tone generating equipment used in a siren system requires frequency stability within $\pm 1\%$ and a total distortion of less than 5%. Tone duration must be compatible with the siren tone-timing scheme selected by the user.

2. It is important to arrange the base station keying circuitry so that the microphone is disconnected when the tones are transmitted to prevent microphone noise from distorting the signal.

3. To ensure good frequency response, the output of the tone encoder must be properly matched to the transmitter. Adjust the transmitter according to the manufacturer's instructions to provide the proper level of deviation. For best results, the transmitter deviation for a single or two-tone system should be 3.3 kHz, a DTMF system's deviation should be set at 3.0 kHz and a digital system should be set to 4 kHz. Key the transmitter, and set PL/DPL to 750 Hz, then strip PL/DPL and set DTMF/Tone deviation to 3.0/3.3 kHz.

3-3. PRE-OPERATION CHECKOUT

WARNING

Injury to the installer and/or damage to the FC unit may occur if the FC is wired incorrectly. Before applying power, verify that the FC unit has been wired in accordance with local and national electrical codes. Make sure the correct AC input is used to apply power.

Visually inspect the siren opening to make sure there are no obstructions and make sure all possible listeners are at least 30' below the bottom of the siren. If it is necessary to get closer to the siren, WEAR ADEQUATE HEARING PROTECTION.

- A. Read above warnings.
- B. Apply power to the control unit.
- C. Press FUNC#1 and verify function #1 executes correctly. Verify that the siren coasts down and stops when the RESET button is pressed. Repeat this process for all functions used.

CAUTION

Other local siren sites may have the same activation code. Take appropriate precautionary measures.

- D. Verify each function operates from all of the activation points.
- E. Padlock all cabinets to help prevent tampering and vandalism.

SECTION IV

RF RECEIVER DESCRIPTION, ALIGNMENT AND TESTING

4-1. RECEIVER MODULE GENERAL DESCRIPTION

The Receiver Module is a fully shielded receiver that plugs into the FC controller. It is available in Low, High and UHF bands. Narrow band models are also available.

The FC control board provided power and adjusts the RX frequency of the receiver.

4-2. FEATURES

- Small size.
- Rugged construction utilizing surface mount components.
- Shielded receiver assembly to prevent interference.
- Available in 3 frequency bands from 30 MHZ to 450 MHz.
- Low current draw, excellent for battery powered operation.
- Synthesized frequency selection.
- Wide temperature operating range.
- Excellent sensitivity.

- Excellent selectivity, able to receive its signal while rejecting others.
- Clean, low distortion recovered audio.
- Noise based squelch circuit, doesn't open receiver in high radio noise environments i.e., near computers etc.

4-3. TERMINAL STRIPS & JACKS, CONTROLS

Connectors and Jacks:

J3	Shield	Ground
	Center	Antenna RF Input

J4	Pin 1	Ground
	Pin 2	+8 VDC input
	Pin 3	Clock line to synthesizer
	Pin 4	Data line to synthesizer
	Pin 5	Latch Enable line to synthesizer
	Pin 6	Carrier Detect (goes low with carrier)
	Pin 7	De-emphasized receive audio
	Pin 8	Flat receive audio

Controls:

Squelch control = R1

4-4. THEORY OF OPERATION

A. The Power Supply

The receiver is designed to be powered from a regulated 8 volt (+/- .25v) DC supply. The incoming VDC passes to U5, a 5 volt regulator, which powers most of the receiver. The 8 volts also passes to U6, a 5 volt regulator which powers the synthesizer's VCO section.

B. The VCO/Synthesizer

U8 is a combination synthesizer / VCO. The frequency of this oscillator is determined by data programmed from the processor on pins 2, 3, and 4. The output from the oscillator drives U9, a double balanced mixer. U6, C32, C33, C34, R29, C29, C30 and C31 form filtered power supplies for the oscillator and digital sections of the synthesizer.

U3 is a TCXO (temperature compensated crystal oscillator) at 20.95 MHZ which serves as a second LO for the receiver and as the reference for the synthesizer. When the synthesizer is locked to, or in lock with, the reference (U9), the voltage on TP2 will be about 3.7 Volts. When out of lock it will be 0 Volts.

C. The Receiver Section

The receive signal enters from the antenna thru J1 and passes to FL1. FL1 is a bandpass filter that attenuates frequencies outside of the receive band. The signal is then passed on to U7. U7 serves as an RF amplifier which boosts the level of the signal by about 18dBm. The receive signal then passes thru bandpass filter FL2, which further attenuates out of band signals. These two filters keep out of band signals from entering the receiver and causing interference or de-sensitization. The filters also prevent the receiver from receiving the image frequency. The receiver can receive the VCO frequency + the IF frequency, or the VCO frequency - the IF frequency. The filters select the desired frequency and attenuate the other. The filters select the desired frequency and attenuate the other.

From FL2 the receive signal passes to U9, the first mixer. U9 mixes the receive signal with the VCO signal to produce the first IF (intermediate frequency) of 21.4 MHZ. The output of U9 is a double balanced output on pins 5 & 6. The 21.4 MHZ receive signal is fed from

pin 5, thru an impedance matching network, L6 and C46, to crystal filter Y3. Y3 filters out all frequencies except 21.4MHZ, +/- 7.5Kc. The signal is then fed to buffer amplifier Q1, which makes up some of the signal lost in Y3, and provides an impedance match to the receiver IC U4.

The 21.4 MHZ receive signal enters U4 on pin 1 where it passes to an internal mixer. Here it is mixed with 20.95 MHZ from U3, the reference oscillator. The resulting 450 KC signal comes out on pin 20 and is fed to ceramic filter Y1. It comes back in on pin 18, passes, through an amplifier and passes back out the ceramic filter Y2. Y1 and Y2 filter out all frequencies except 450 KC. The signal then passes in on pin 13, to an internal limiter / amplifier. A voltage reflecting the strength of the received signal appears on pin 4 and on TP1. This can be used to align the receiver. The 450 Kc receive signal then passes to an internal demodulator which, using L1, recovers the audio from the received signal. The audio appears at pin 8 of U4.

The receive audio is then fed to U2A, which filters out frequencies above 3Kc then passes this audio to J2 pin 8. The receive audio also passes to U2B, which is a de-emphasis stage, filtering frequencies above 880 HZ by 6dB per octave. The output of U2B passes to J2 pin 7.

The receive audio from U4 pin 8 is also fed thru R15 to U1B, an opamp / filter. This amplifier filters out and boosts frequencies above 5Kc. This high frequency audio is converted to a DC voltage by D1, R13, R14 and C10. This voltage then passes to U1A, a comparator which, when the voltage drops below a threshold, will cause pin 1 to pull to ground. The squelch control sets the average DC level on pin 3 just above the threshold voltage. Thus when a signal is received by the receiver, the high frequency noise in the audio signal drops. The voltage produced by D1 drops, and the voltage on pin 3 drops below the threshold. The output on pin 1 pulls to ground, indicating the presence of a receive signal with sufficiently little noise. The output from pin 1 passes to J2 pin 6, the carrier detect output.

CAUTION

Remove power and use appropriate ESD protection before removing or installing the receiver on the control board to avoid damage to components.

NOTICE

All receivers have been carefully tested and aligned at the factory prior to shipment and, under normal operating conditions and use, should not require attention beyond that normally given to electronic equipment. Replacement of a critical or major component may require subsequent realignment of the receiver. Receiver alignment should be performed only by persons experienced in this work using the proper test equipment.

The controller should be setup with a service monitor or other type of calibrated RF signal generator plugged directly into the antenna port. Program the FC with the desired RF frequency and relay output timings using the FSPWARE programming software.

4-5. TEST AND ALIGNMENT

Checking the power supplies;

Power the unit up;

Confirm +5 VDC +/- 0.25 V at the “+” end of C42.

Confirm +5 VDC +/- 0.25V at the “+” end of C32.

Checking for Synthesizer Lock;

Monitor voltage on TP2 with a high impedance DC volt meter;

The voltage on TP2 should from 3.0 to 3.9V. If not, the synthesizer is out of lock.

Setting the Synthesizer on frequency;

Using a service monitor set in receive mode, monitor the frequency of the VCO by placing a pickup loop on top of the synthesizer, U8.

The VCO frequency should be the receive frequency - 21.4mHz, unless the unit is a Lowband VHF unit, in which case the frequency will be 21.4 MHz + the receive frequency.

Adjust the frequency of the VCO using the trimmer cap in TCXO U3 until the frequency is within +/- 300Hz.

Aligning the receiver;

Using a service monitor set in generate mode, inject an unmodulated RF carrier signal into the receiver.

Connect an Oscilloscope to TP1. Set the Oscilloscope for 20mV per Division, Bandwidth limiting On, and a DC offset of 0.60 to 1.0Volts, whatever is required to see the trace on the scope.

Turn up the signal level into the receiver until the voltage on TP1 begins to rise.

Adjust the coils in FL1 and then FL2 for the most voltage on TP1. TP1 will only rise to about 2 volts so it will be necessary to turn down the level from the service monitor during the tuning process.

Re-tune the coils in FL1 and FL2 after the first pass through, as tuning the stages ahead of a coil can change it's tuning.

Inject a 100uV signal into the receiver and modulate the signal with a 1kHz tone at 3kHz deviation.

Monitor the receive audio at JP9 pin 7, or an equivalent point, on the FCM board. With an Oscilloscope, *carefully* adjust coil L1 for the most level.

The level at JP9 pin 7 should be 800mVp-p +/- 200mv.

Using R58 on the FCM board, adjust the level at TP3 to 1Vpp.

Connect a Distortion meter to TP3 on the FCM board and *slowly* adjust variable cap C46 for lowest distortion. Should be less than 3.0%.

Connect a SINAD meter to TP3 of the FCM board and

reduce the level of the RF signal from the service monitor until the SINAD meter reads 12dB. This should be less than 0.35uV for all bands.

With the RF level at 12dB SINAD, monitor Carrier Detect LED on the FCM board and adjust the squelch pot (R1) until the LED just comes on.

4-6. TCS/DCS PROGRAMMING

The optional TCS/DCS decoder will normally come preprogrammed from the factory. If field reprogramming is desired, set switches 1 thru 12 as per the table in figure 4-2.

With the unit oriented with JP1 at the bottom, switch 1 is the left most switch and a "0" from the programming table would be with the switch in the up or on position.

In Tone coded squelch mode, switches 7 thru 12 must be in the up or "1" down or off position.

In Digital coded squelch mode switches 1 thru 7 set the digital code, switch 10 sets the polarity of the transmit data, switch 11 sets the polarity of the receive data and switch 12 must be in the up or "0" position, indicating that the unit is set for digital coded squelch.

The transmit data polarity can only be set with the unit plugged into a controller which is connected to a transmitter of the same type that will be used in the final installation. The polarity switch should be set to whichever position causes other units of the same type to decode or, if a service monitor is available that decodes digital codes, which ever switch position causes the monitor to decode.

TCS TONE PROGRAMMING

FREQ	CODE	SWITCH #
		6 5 4 3 2 1
36.6*		0 0 0 0 1 0
37.9*		0 0 0 0 1 1
39.6*		0 0 0 1 0 0
44.4*		0 0 0 1 0 1
47.5*		0 0 0 1 1 0
49.2*		0 0 0 1 1 1
51.2*		0 0 1 0 0 0
53.0*		0 0 1 0 0 1
54.9*		0 0 1 0 1 0
56.8*		0 0 1 0 1 1
58.8*		0 0 1 1 0 0
63.0*		0 0 1 1 0 1
67.0	XZ	0 0 1 1 1 0
69.4*		0 0 1 1 1 1
71.9	XA	0 1 0 0 0 0
74.4	WA	0 1 0 0 0 1
77.0	XB	0 1 0 0 1 0
79.7	SP	0 1 0 0 1 1
82.5	YZ	0 1 0 1 0 0
85.4	YA	0 1 0 1 0 1
88.5	YB	0 1 0 1 1 0
91.5	ZZ	0 1 0 1 1 1
94.8	ZA	0 1 1 0 0 0
97.4	ZB	0 1 1 0 0 1
100.0	1Z	0 1 1 0 1 0
103.5	1A	0 1 1 0 1 1
107.2	1B	0 1 1 1 0 0
110.9	2Z	0 1 1 1 0 1
114.8	2A	0 1 1 1 1 0
118.8	2B	0 1 1 1 1 1
123.0	3Z	1 0 0 0 0 0
127.3	3A	1 0 0 0 0 1
131.8	3B	1 0 0 0 1 0
136.5	4Z	1 0 0 0 1 1
141.3	4A	1 0 0 1 0 0
146.2	4B	1 0 0 1 0 1
151.4	5Z	1 0 0 1 1 0
156.7	5A	1 0 0 1 1 1
159.8*		1 0 1 0 0 0
162.2	5B	1 0 1 0 0 1
167.9	6Z	1 0 1 0 1 0
171.3*		1 0 1 0 1 1
173.8	6A	1 0 1 1 0 0
177.3*		1 0 1 1 0 1
179.9	6B	1 0 1 1 1 0
183.5*		1 0 1 1 1 1
186.2	7Z	1 1 0 0 0 0
189.9*		1 1 0 0 0 1
192.8	7A	1 1 0 0 1 0
196.6*		1 1 0 0 1 1
199.5*		1 1 0 1 0 0
203.5	M1	1 1 0 1 0 1
206.5*		1 1 0 1 1 0
210.7		1 1 0 1 1 1
218.1		1 1 1 0 0 0
225.7		1 1 1 0 0 1
229.1*		1 1 1 0 1 0
233.6		1 1 1 0 1 1
241.8		1 1 1 1 0 0
250.3		1 1 1 1 0 1
254.1*		1 1 1 1 1 0
SW7-OFF		
SW8-OFF		
SW9-OFF		
SW10-OFF		
SW11-OFF		
SW12-OFF		

"1" = AN OFF SWITCH

"0" = AN ON SWITCH

*** NOT EIA STANDARD TONES

DCS PROGRAMMING

OCTAL	SWITCH #
CODE	7 6 5 4 3 2 1
023	0 0 0 0 0 0 0
025	0 0 0 0 0 0 1
026	0 0 0 0 0 1 0
031	0 0 0 0 0 1 1
032	0 0 0 0 1 0 0
043	0 0 0 0 1 0 1
047	0 0 0 0 1 1 0
051	0 0 0 0 1 1 1
054	0 0 0 1 0 0 0
065	0 0 0 1 0 0 1
071	0 0 0 1 0 1 0
072	0 0 0 1 0 1 1
073	0 0 0 1 1 0 0
074	0 0 0 1 1 0 1
114	0 0 0 1 1 1 0
115	0 0 0 1 1 1 1
116	0 0 1 0 0 0 0
125	0 0 1 0 0 0 1
131	0 0 1 0 0 1 0
132	0 0 1 0 0 1 1
134	0 0 1 0 1 0 0
143	0 0 1 0 1 0 1
152	0 0 1 0 1 1 0
155	0 0 1 0 1 1 1
156	0 0 1 1 0 0 0
162	0 0 1 1 0 0 1
165	0 0 1 1 0 1 0
172	0 0 1 1 0 1 1
174	0 0 1 1 1 0 0
205	0 0 1 1 1 0 1
223	0 0 1 1 1 1 0
226	0 0 1 1 1 1 1
243	0 1 0 0 0 0 0
244	0 1 0 0 0 0 1
245	0 1 0 0 0 1 0
251	0 1 0 0 0 1 1
261	0 1 0 0 1 0 0
263	0 1 0 0 1 0 1
265	0 1 0 0 1 1 0
271	0 1 0 0 1 1 1
306	0 1 0 1 0 0 0
311	0 1 0 1 0 0 1

SW8-OFF
SW9-OFF
SW10-OFF TX DATA NON-INVERTED
SW10-ON TX DATA INVERTED
SW11-OFF RX DATA NON-INVERTED
SW11-ON RX DATA INVERTED
SW12-ON DIGITAL CODED SQUELCH
SW12-OFF TONE CODED SQUELCH

"1" = AN OFF SWITCH

"0" = AN ON SWITCH

DCS PROGRAMMING

OCTAL	SWITCH #
CODE	7 6 5 4 3 2 1
315	0 1 0 1 0 1 0
331	0 1 0 1 0 1 1
343	0 1 0 1 1 0 0
346	0 1 0 1 1 0 1
351	0 1 0 1 1 1 0
364	0 1 0 1 1 1 1
365	0 1 1 0 0 0 0
371	0 1 1 0 0 0 1
411	0 1 1 0 0 1 0
412	0 1 1 0 0 1 1
413	0 1 1 0 1 0 0
423	0 1 1 0 1 0 1
431	0 1 1 0 1 1 0
442	0 1 1 0 1 1 1
445	0 1 1 1 0 0 0
464	0 1 1 1 0 0 1
465	0 1 1 1 0 1 0
466	0 1 1 1 0 1 1
503	0 1 1 1 1 0 0
506	0 1 1 1 1 0 1
516	0 1 1 1 1 1 0
532	0 1 1 1 1 1 1
546	1 0 0 0 0 0 0
565	1 0 0 0 0 0 1
606	1 0 0 0 0 1 0
612	1 0 0 0 0 1 1
624	1 0 0 0 1 0 0
627	1 0 0 0 1 0 1
631	1 0 0 0 1 1 0
632	1 0 0 0 1 1 1
654	1 0 0 1 0 0 0
662	1 0 0 1 0 0 1
664	1 0 0 1 0 1 0
703	1 0 0 1 0 1 1
712	1 0 0 1 1 0 0
723	1 0 0 1 1 0 1
731	1 0 0 1 1 1 0
732	1 0 0 1 1 1 1
734	1 0 1 0 0 0 0
743	1 0 1 0 0 0 1
754	1 0 1 0 0 1 0

291A114B-01

Figure 4-1. PL Programming Chart

SECTION V

MAINTENANCE, SERVICE AND SPARE PARTS

5-1. PREVENTIVE MAINTENANCE

Test the Siren Controller for proper operation at least once a month. A daily test at noon, curfew, or other selected time is preferred. This not only enhances the usefulness of the siren, but also instills public confidence in the reliability of the warning system.

In order to minimize the possibility of Siren Controller failure, annual inspection and maintenance is desirable. This schedule is only a suggested guideline. It may be necessary to vary the schedule if the siren is used frequently or if it is used in an extreme climate.

5-2. INSPECTION

1. Check the integrity of the installation. Make sure mounting; conduit, antenna, and connections are secure.

2. Check enclosure for signs of water entry or corrosion. Seal any leaks, and repaint any flaws in the painted finish.

3. Check contacts of the control relay(s). Replace relay(s) if contacts are excessively worn.

4. Test the controller for proper operation. All functions of the controller should be tested locally and via radio when applicable.

5. If the controller is not operating properly, check the power supply as follows:

5-3. POWER SUPPLY TESTING

Refer to figure 5-1 at the end of this section for component locations.

1. Remove AC power from the service disconnect and check F1 and F2 on the control board.

CAUTION

Use appropriate ESD protection when touching and shipping electronic parts to avoid component damage. Improper shipping may void warranty.

2. Re-connect power.

3. Check the voltage at test point TP10 for 13 to 17 VDC. The "POWER" LED, D32, should be on.

4. Check the voltage at test point TP9 for 8.0 VDC +/- 0.25 VDC.

5. Check the voltage at test point TP8 for 5.0VDC +/- 0.25 VDC.

6. Confirm that the "HEARTBEAT" LED #D23 is flashing.

5-4. SERVICE

If the FC is not functioning properly, inspect the unit per sections 5-2 and 5-3. Federal Signal will provide technical assistance with problems that cannot be handled satisfactorily and promptly locally. If assistance is required, contact:

FWS Customer Care Center
Signal Division
Federal Signal Corporation
2645 Federal Signal Drive
University Park, Illinois 60466
800-524-3021


5-5. SPARE PARTS LIST

Refer to figure 5-1 on the following page for component locations.

F1	148A142A-01
F2	148A135
RLY1-RLY4	131195
CTCSS	2001107
ANT. CABLE	175902A-07
BULKHEAD	124A056
MAIN PC BOARD ..	2005023

HISTORICAL REFERENCE ONLY
Document may not be up to date

Figure 5-1. FC Assembly Drawing

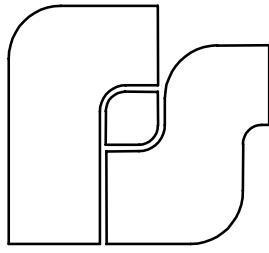

FEDERAL SIGNAL CORPORATION

***FC SERIES
SIREN CONTROLLER***

***INSTALLATION, OPERATION AND
USER'S MANUAL***

**HISTORICAL REFERENCE
Document may not be up to date**

255294H

11/05

Printed in U.S.A.

Copyright 2005 Federal Signal Corporation

Price \$15